

61 35 278

BDC(Body Domain Controller) 제어 장치 제거 및 설치


예비 작업

1 - 모든 배터리 접지 리드 분리



- 추가 정보를 참조하십시오.

2 - 오른쪽 발판 트림 제거

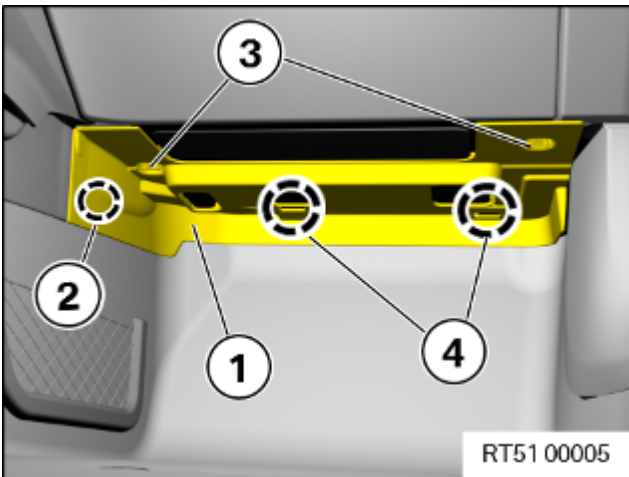


- 잠금 장치(3)를 90°로 돌립니다.
- 풋웰 트림(1)을 가이드(2)에서 빼냅니다.
- 풋웰 트림(1)을 가이드(4)에서 안쪽으로 분리합니다.
- 연결된 플러그 연결을 해제하고 연결을 끊습니다.

3 - 오른쪽 도어 실 커버 스트립 제거




설명은 왼쪽 구성 요소에만 해당됩니다. 오른쪽의 절차는 동일합니다.

▶ 도어 실 커버 스트립 제거

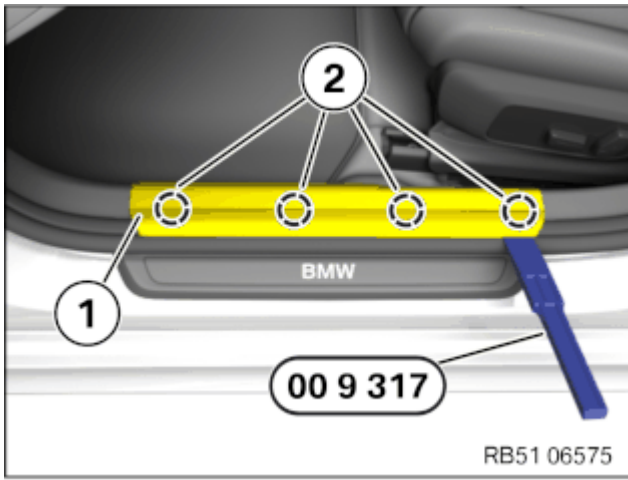


- 전용 공구를 사용하여 도어 실 커버 스트립(1)을 분리합니다. **0 490 534 (00 9 317)** 바닥 패널의 클립(2)에서 분리합니다.

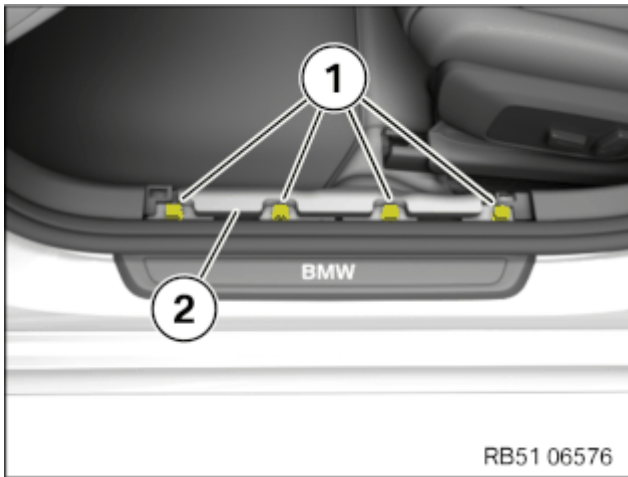

- 필요한 경우 바닥 패널(2)에서 클립(1)을 제거하고 도어 실 커버 스트립에 부착합니다.


4 - 오른쪽 A-필러의 발밑 공간에서 측면 트림 패널 제거

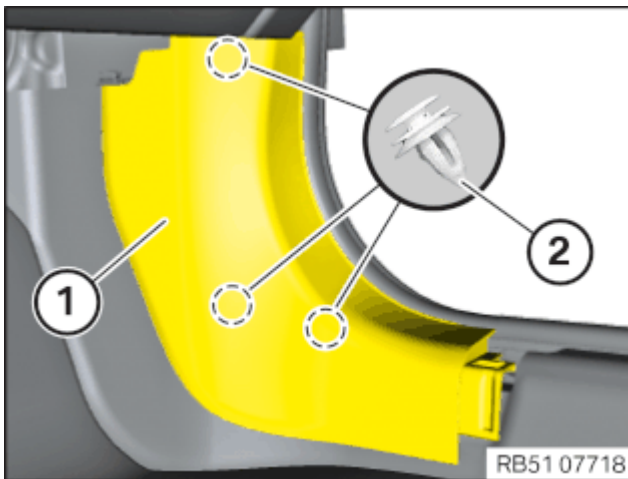


- 클립(2)에서 측면 트림 패널(1)을 풀고 안쪽으로 제거합니다.

주저


5 - BDC 제어 장치 제거

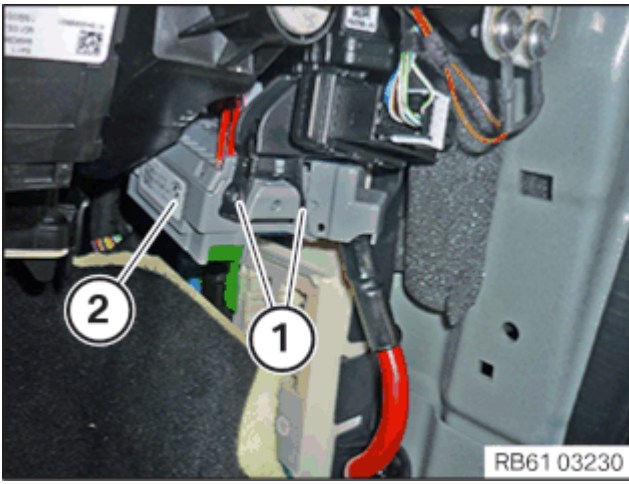

- 래치 장치(1)의 잠금을 해제하고 배전함(2)을 아래 쪽으로 제거합니다.

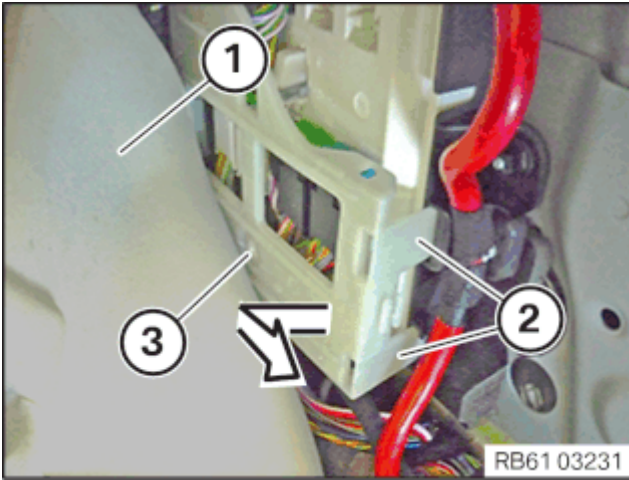


- 카펫(1)을 옆으로 접습니다.
- 걸쇠 장치(2)를 풉니다.
- 가이드 커버(3)를 화살표 방향으로 뺍니다.

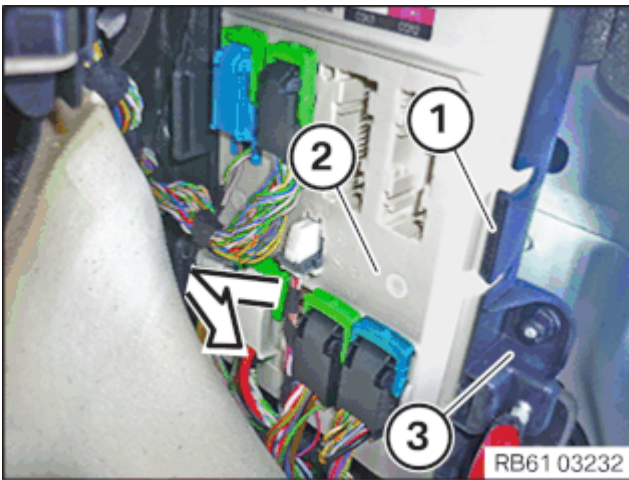


- 모든 커넥터의 잠금을 해제하고 분리합니다.
- 래치 메커니즘(1)을 풉니다.
- 화살표 방향으로 브래킷(3)에서 BDC 제어 장치(2)를 빼냅니다.


6 - BDC 제어 장치 설치

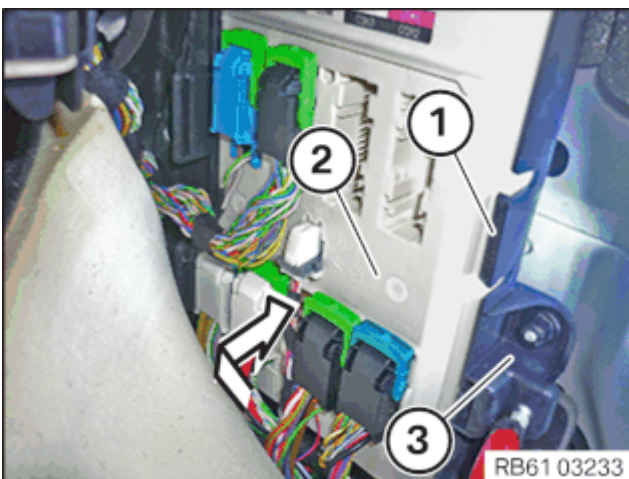

- 화살표 방향으로 홀더(3)의 BDC 제어 장치(2)를 안내합니다.
- BDC 제어 장치(2)를 래치 메커니즘(1)에 끼웁니다.
- 모든 커넥터를 연결하고 잠급니다.

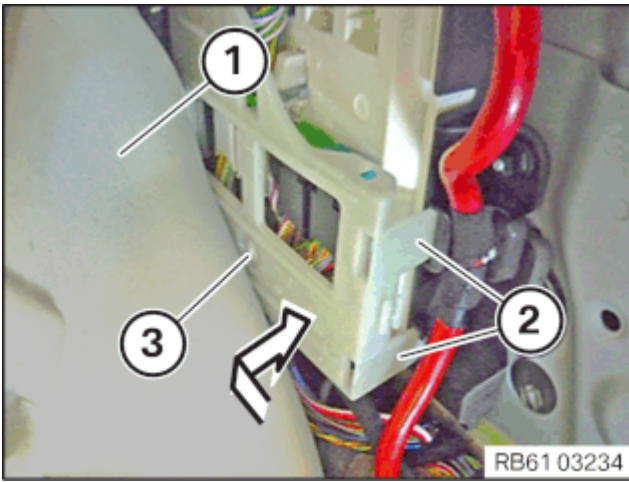


- 덮개(3)를 화살표 방향으로 안내하고 걸쇠 장치(2)에 끼웁니다.
- 카펫(1)을 배치합니다.

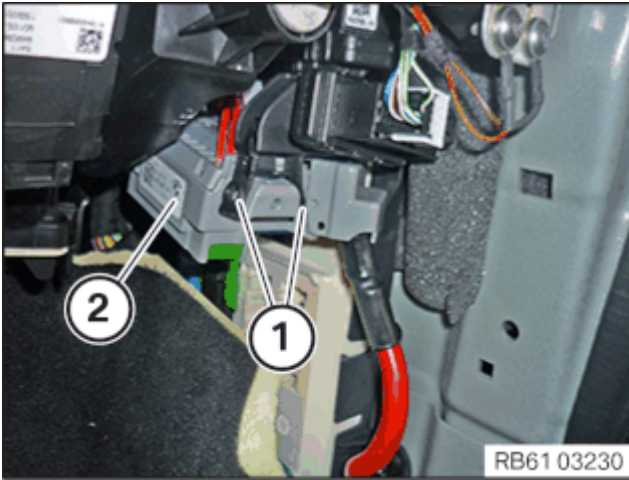

- 배전 활(2)을 위쪽으로 안내하고 래칭 메커니즘(1)에 올바르게 끼웁니다.

후처리

7 - 오른쪽 A 필러의 발판에 측면 트림 패널 설치

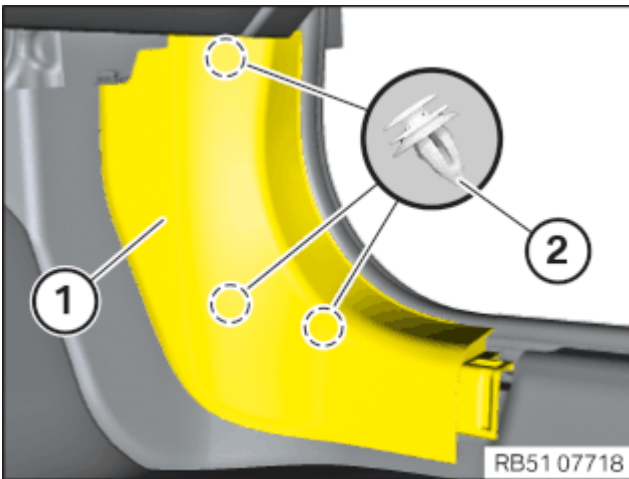

- 클립(2)이 손상되지 않았는지 확인하십시오. 손상되거나 누락된 클립을 교체합니다(2).
- 측면 트림 패널(1)을 올바르게 배치하고 클립(2)에 끼웁니다.
- 측면 트림 패널(1)이 모서리 보호 장치에 대해 올바르게 장착되었는지 확인하십시오.


8 - Install right door sill cover strip




Description is for left component only. Procedure on the right side is identical.

► Install the door sill cover strip

- Check the clips (1) for damage and renew if necessary.

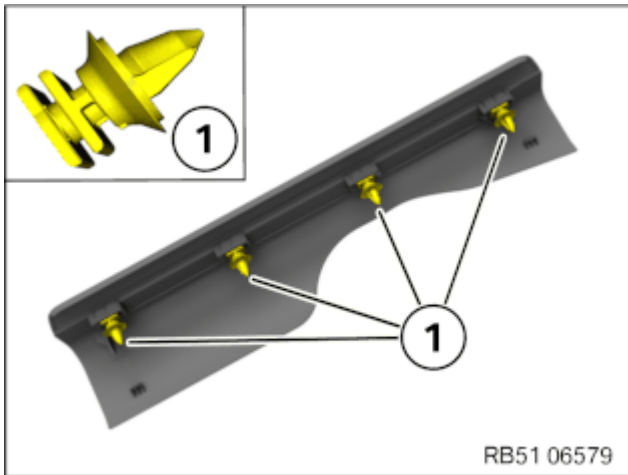


- Clip the door sill cover strip (1) into the floor panel with the clips (2).

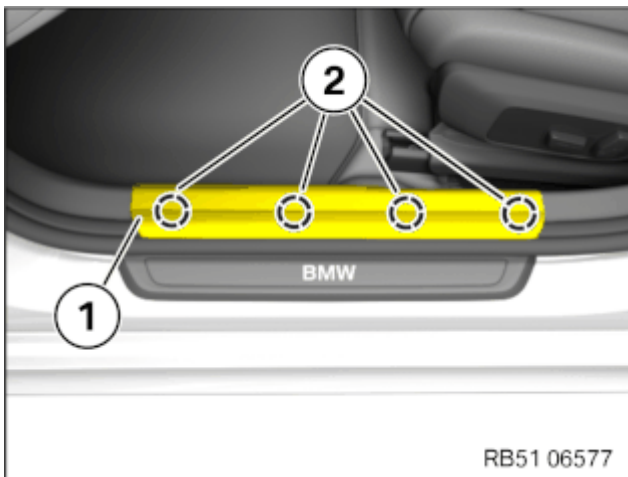

9 – Install the right footwell trim panel

- Connect associated connector.
- Attach the footwell trim (1) to the guides (4) and fold up.
- Guide the footwell trim (1) into the guide (2) of the centre console.
- Position locks (3) correctly and turn by 90°.

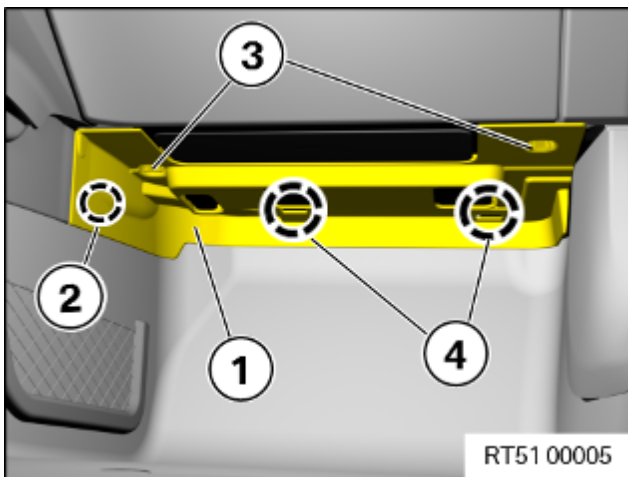

10 – Disconnecting all battery earth leads




- See additional information.

Additional Information

Overview of Special Tools

0 490 534 (00 9 317) Wedge

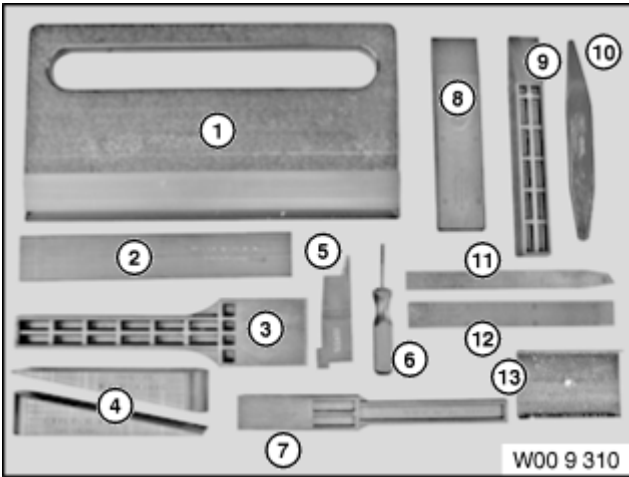

Common	Used in step	3
Usage	(Trim wedge) Replaced by special tool 00 9 325 from 11/2008 (quality improvement due to new material) Replaced by 00 9 325 (0 496 569)	
Included in the tool or work	0 490 527	
Storage location		
Replaced by		
In connection with		
SI-Number		

Links

Repair instructions	Used in step
61 20 900 Disconnecting and connecting battery earth lead	1 10
61 20 900 Disconnecting and connecting battery earth lead	1 10
61 20 900 Disconnecting and connecting battery earth lead	1 10
61 20 900 Disconnecting and connecting battery earth lead	1 10
61 20 900 Disconnecting and connecting battery earth lead	1 10
61 20 900 Disconnecting and connecting battery earth lead	1 10
61 20 900 Disconnecting and connecting the battery earth lead (all battery earth leads)	1 10
61 20 900 Disconnecting and connecting the battery earth lead (all battery earth leads)	1 10

<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting the battery earth lead (all battery earth leads)</u>	1	10
<u>61 20 900 Disconnect and connect battery earth lead (Plug-in Hybrid Electric Vehicle)</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting battery earth lead</u>	1	10
<u>61 20 900 Disconnecting and connecting the battery earth lead (all battery earth leads)</u>	1	10
<u>61 20 900 배터리 접지선 분리 및 연결</u>	1	10
<u>61 20 900 배터리 접지선 분리 및 연결</u>	1	10
<u>61 20 900 배터리 접지선 분리 및 연결</u>	1	10
<u>61 20 900 배터리 접지선 분리 및 연결</u>	1	10
<u>61 20 900 배터리 접지선 분리 및 연결</u>	1	10
<u>61 20 900 배터리 접지선 분리 및 연결</u>	1	10
<u>61 20 900 배터리 접지선 분리 및 연결</u>	1	10

정보 제공 목적으로만 사용하십시오. The information on this website is provided AS-IS with no warranties, express or implied, and is not guaranteed to be error-free, up-to-date or complete. NewTIS and BMW assume no liability for any loss or damage arising from the use or reliance on the information and content on this website. The content on this website is subject to change without notice.